



Parts Index


* not to scale

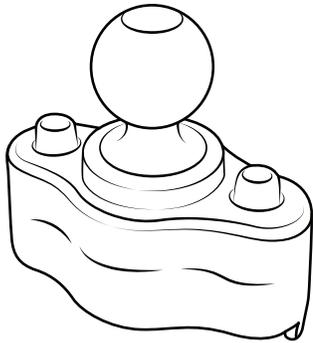

- 1 Position base inside track slot. While gently pressing downward, turn housing to allow side tabs to seat into track slot.

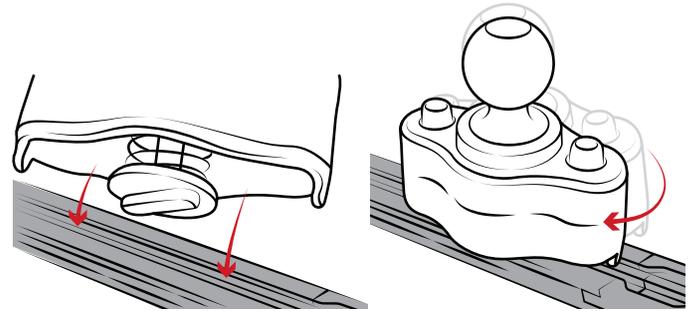

- 2 Determine desired location of base along your track and while holding housing in place, turn RAM® Track Ball™ clockwise to tighten. To adjust the location of base, push buttons and turn RAM® Track Ball™ counter-clockwise to loosen.

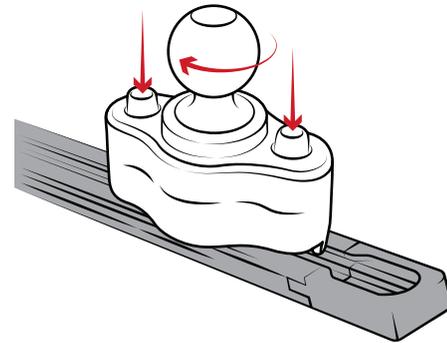

RPR-INS-383