

GARMIN[®]

PANOPTIX™ LIVESCOPE™

INSTALLATION INSTRUCTIONS

Important Safety Information

⚠ WARNING

See the *Important Safety and Product Information* guide in the chartplotter product box for product warnings and other important information.

You are responsible for the safe and prudent operation of your vessel. Sonar is a tool that enhances your awareness of the water beneath your boat. It does not relieve you of the responsibility of observing the water around your boat as you navigate.

⚠ CAUTION

Failure to install and maintain this equipment in accordance with these instructions could result in damage or injury.

Always wear safety goggles, ear protection, and a dust mask when drilling, cutting, or sanding.

NOTICE

When drilling or cutting, always check what is on the opposite side of the surface.

To obtain the best performance and to avoid damage to your boat, you must install the Garmin[®] device according to these instructions.

Read all installation instructions before proceeding with the installation. If you experience difficulty during the installation, go to support.garmin.com for more information.

Registering Your Device

Help us better support you by completing our online registration today. Keep the original sales receipt, or a photocopy, in a safe place.

- 1 Go to my.garmin.com/registration.
- 2 Sign in to your Garmin account.

Software Update

You must update the software when you install this device.

If your Garmin chartplotter has Wi-Fi[®] technology, you should update the software using the ActiveCaptain™ app on a compatible Android™ or Apple[®] device. If your chartplotter does not have Wi-Fi technology, you should update the software using a memory card and a Windows[®] computer.

For more information, go to support.garmin.com.


Tools Needed

- Drill
- 4 mm (⁵/₃₂ in.) and 3.2 mm (¹/₈ in.) drill bits
- Masking tape
- #2 Phillips screwdriver
- Marine sealant
- 32 mm (1 ¹/₄ in.) hole saw (optional)
- Cable ties (optional)

Mounting Considerations

- You must angle the transducer correctly for your selected mode to work properly.

- You must install the sonar module in a location with adequate ventilation where it will not be exposed to extreme temperatures.
- You should mount the transducer in a location where it will not be jarred when launching, hauling, or storing.
- You should mount the transducer in a location where it is not behind strakes, struts, fittings, water intake or discharge ports, thru-hull transducers, or anything that creates air bubbles or causes the water to become turbulent. Turbulent water may interfere with the sonar beam.
- You should mount the transducer as close to the center line of the boat as possible.
- When mounted farther from the center of the transom, a greater deadrise can cause the boat hull ① to interfere with the sonar beam ②, and can cause inconsistent detection on the opposite side of the boat ③. The transducer is shown from behind.

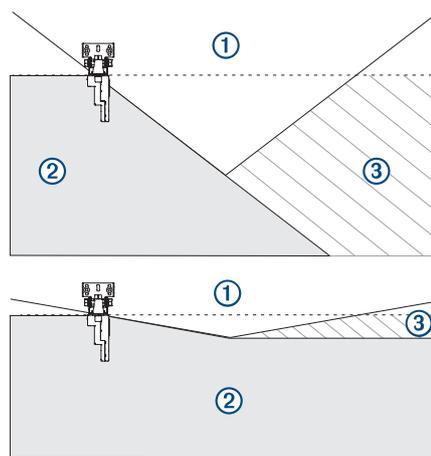

- On single-drive vessels, you must not mount the transducer in the path of the propeller.
- On twin-drive vessels, you should mount the transducer between the drives, if possible.
- You should mount the sonar module in a location where the LEDs are visible.
- You should mount the sonar module in a location where the cables can be easily connected.

Installing the Transducer on a Trolling Motor

Assembling the Trolling Motor Barrel Mount Hardware

- 1 Align the top of the transducer ① with the top of the bracket ②.



- 2 Using the included hex wrench, attach the bracket to the transducer with the shoulder screw ③, rubber washer ④, and flat washer ⑤.

NOTE: You must fully tighten the mount to the transducer. The recommended torque applied to the shoulder screw is 2.5 lb-ft. (3.4 N-m).

Installing the Transducer on a Trolling Motor

NOTICE

You must secure the transducer cable to the shaft or other secure location during installation. Damage to the transducer cable wires or cable jacket can cause transducer failure.

- 1 Insert the hose clamp ① through the slot on the trolling motor mount ② until equal lengths extend on both sides of the mount.




- 2 Secure the hose clamp around the trolling motor ③.
NOTE: Do not rotate the transducer.
- 3 Secure the transducer cable to the motor shaft or other secure location.
- 4 Route the transducer cable to the installation location of the sonar module while taking these precautions.
 - You should not route the cable close to electrical wires or other sources of electrical interference.
 - You must route the cable so it is not pinched when the trolling motor is deployed or stowed.**NOTE:** If necessary, for extra cable length you can connect an optional extension cable, available at buy.garmin.com or from your Garmin dealer.
- 5 Position the transducer to your desired angle (*Trolling Motor Mount Orientation*, page 2).

Trolling Motor Mount Orientation

The orientation depends on which side of the trolling motor you have mounted the transducer on, and your desired field of view.

TIP: No tools are necessary to change the orientation from forward to down. Turn the mount one click to change the orientation from forward to down.

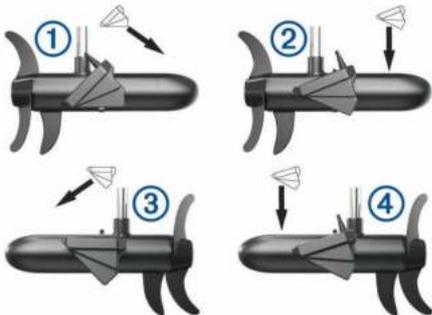

①	Starboard side, forward view
②	Starboard side, downward view
③	Port side, forward view
④	Port side, downward view

Installing the Transducer on a Trolling Motor Shaft

Trolling Motor Shaft Bracket Orientation

The trolling motor shaft bracket features an 8-degree cant to reduce the effects of the trolling motor barrel interference with the transducer beam. You must orient the arrow ① and the narrow end of the angle ② to the top when you attach the bracket to the trolling motor shaft.



Assembling the Trolling Motor Shaft Mount Hardware

With the trolling motor bracket oriented correctly (*Trolling Motor Shaft Bracket Orientation*, page 2), use the included hex wrench to attach the transducer ① to the trolling shaft bracket ② with the shoulder screw ③, flat washer ④, and rubber washer ⑤.

NOTE: You must fully tighten the mount to the transducer. The recommended torque applied to the shoulder screw is 2.5 lb-ft. (3.4 N-m).



Installing the Transducer on the Trolling Motor Shaft

NOTICE

You must secure the transducer cable to the shaft or other secure location during installation. Damage to the transducer cable wire or the cable jacket can cause transducer failure.

You should mount the transducer as far from the motor as possible.

You should use the included rubber insert on a 25 mm (1 in.) trolling motor shaft.

- 1 Using the included hex wrench, insert the M6 screws ① and attach the shaft trolling bracket ② to the transducer bracket ③ around the trolling motor shaft.




- 2 Secure the transducer cable to the motor shaft or other secure location.
- 3 Route the transducer cable to the installation location of the sonar module while taking these precautions.
 - You should not route the cable close to electrical wires or other sources of electrical interference.
 - You must route the cable so it is not pinched when the trolling motor is deployed or stowed.
- 4 Position the transducer to your desired angle (*Trolling Motor Shaft Orientation*, page 3).

Trolling Motor Shaft Orientation

The angle of installation depends on the side of the trolling motor shaft you mount the bracket on, and your desired field of view.

TIP: No tools are necessary to change the orientation from forward to down. Turn the mount one click to change the orientation from forward to down.

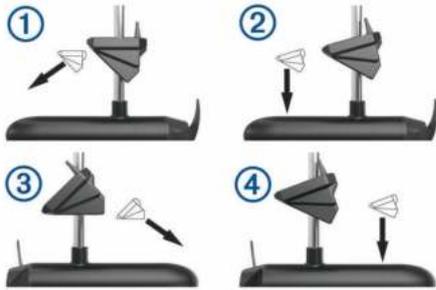

①	Port side, forward view
②	Port side, downward view
③	Starboard side, forward view
④	Starboard side, downward view

Installing the Transducer on a Transom

Assembling the Transom-Mount Hardware

- 1 Attach the transducer mount bracket ① to the transducer ② using the mounting screws ③ and lock washers ④.



- 2 Attach the transducer mount bracket to the transom mount bracket ⑤ using the bolts ⑥, flat washers ⑦, and lock nuts ⑧.

NOTE: The recommended torque applied to the screw is 15 lb-ft. (20 N-m).

NOTE: If the transducer causes excessive spray when mounted to the transom, you can purchase a deflector to install between the transducer and mount bracket. Go to buy.garmin.com, or contact your Garmin dealer for information about optional accessories.

Installing the Transom-Mount Hardware

NOTICE

If you are mounting the bracket on fiberglass with screws, it is recommended to use a countersink bit to drill a clearance counterbore through only the top gel-coat layer. This will help to avoid cracking in the gel-coat layer when the screws are tightened.

- 1 Place the transducer mount so the top of the transducer is under the transom.
- 2 Using the transom mount as a template, mark the location of the pilot holes.
- 3 Wrap a piece of tape around a 4 mm ($5/32$ in.) bit at 19 mm ($7/10$ in.) from the point of the bit, to avoid drilling the pilot holes too deep.
- 4 If you are installing the bracket on fiberglass, place a piece of tape over the pilot-hole location to reduce cracking of the gel coat.
- 5 Using the 4 mm ($5/32$ in.) bit, drill the pilot holes approximately 19 mm ($3/4$ in.) deep at the marked locations.
- 6 Apply marine sealant to the included 20 mm screws.
- 7 Using the three 20 mm screws ①, attach the transducer mount to the transom.



- 8 If you must route the cable through the transom, choose a pilot-hole location well above the waterline and mark it.
- 9 If you marked a pilot hole in step 8, use a 32 mm (1 1/4 in.) hole saw to drill a pass-through hole completely through the transom.
- 10 Route the transducer cable to the sonar module:
 - If you are routing the cable using a pass-through hole, push it through the hole you drilled in step 9.
 - If you are not routing the cable using a pass-through hole, route the cable up and over the top of the transom.
 You should avoid routing the cable close to electrical wires or other sources of electrical interference.

Transom Mount Orientation

If necessary, to reduce spray you can install an optional splash guard, available at buy.garmin.com or from your Garmin dealer.



NOTE: To use the compass, you must mount the transducer on the transom or the trolling motor shaft. The compass may not work when you mount the transducer on the motor.

NOTE: For best results, you should use a heading sensor such as the SteadyCast™ heading sensor.

You can begin turning your boat before calibrating, but you must fully rotate your boat 1.5 times during calibration.

- 1 From an applicable sonar view, select **MENU > Sonar Setup > Installation**.
- 2 If necessary, select **Use AHRS** to turn on the AHRS sensor.
- 3 Select **Calibrate Compass**.
- 4 Follow the on-screen instructions.

Maintenance

Cleaning the Transducer

Aquatic fouling accumulates quickly and can reduce your device's performance.

- 1 Remove the fouling with a soft cloth and mild detergent.
- 2 Wipe the device dry.

Specifications

Panoptix LiveScope LVS32 Specifications

Dimensions (L x H x W)	136.4 x 96.5 x 44.5 mm (5.37 x 3.8 x 1.75 in.)
Weight (transducer only)	850 g (1.87 lbs.)
Frequencies	From 530 to 1.1 MHz
Operating temperature	From 0 to 40°C (from 32 to 104°F)
Storage temperature	From -40 to 85°C (from -40 to 185°F)
Maximum depth/distance*	61 m (200 ft.)
Field of view	Front to back: 135 degrees Side-to-side: 20 degrees

*Dependent upon water salinity, bottom type, and other water conditions.

Panoptix LiveScope GLS 10 Sonar Module Specifications

Dimensions (W x H x D)	245 x 149 x 65 mm (9.7 x 5.9 x 2.6 in.)
Weight	1.96 kg (4.33 lbs.)
Operating temperature	From -15 to 70°C (from 5 to 158°F)
Storage temperature	From -40 to 85°C (from -40 to 185°F)
Power input	From 10 to 32 Vdc
Power usage	21 W typical, 24 mW min., 58 W max.
Compass-safe distance	178 mm (7 in.)
Data output	Garmin Marine Network

Open-Source Software License

To view the open-source software license(s) used in this product, go to developer.garmin.com/open-source/linux/.

© 2018 Garmin Ltd. or its subsidiaries

Garmin® and the Garmin logo are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. ActiveCaptain™, LiveScope™, Panoptix™, and SteadyCast™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

Android™ is a trademark of Google Inc. Apple® is a trademark of Apple Inc., registered in the U.S. and other countries. Wi-Fi® is a registered trademark of Wi-Fi Alliance Corporation. Windows® is a registered trademark of Microsoft Corporation in the United States and other countries. Other trademarks and trade names are those of their respective owners.



support.garmin.com